


# A40C/A20C

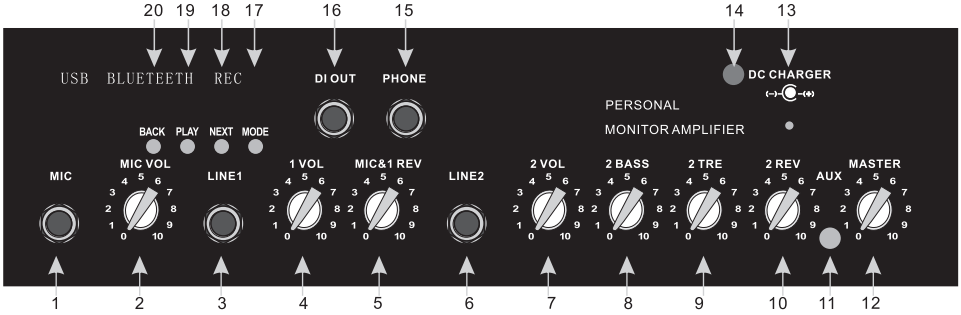

1. MIC  
Input for microphone.
2. MIC VOL  
Sets the volume level for the MIC channel.
3. LINE1  
For connect of instrument.
4. 1VOL  
Sets the volume level for the LINE1 channel.
5. MIC&1 REV  
Adjusts the MIC&LINE1 reverb level.
6. LINE2  
For connect of instrument.
7. 2VOL  
Sets the volume level for the LINE2 channel.
8. 2BASS  
Controls the low frequency in the LINE2 channel.
9. 2TRE  
Controls the high frequency in the LINE2 channel.
10. 2REV  
Adjusts the LINE1 reverb level.
11. AUX  
Socket for connection of external CD player.
12. MASTER  
Adjusts the level across all channel.
13. DC CHARGER  
Connects the machine to power supply.
14. LED  
Show the charge condition.
15. PHONE  
Socket for connection of external headphone.
16. DI OUT  
Sockets for connection to a P.A. system.

## TECHNICAL SPECIFICATION

Power Output:	80W/40W
Power Requirements:	AC220V/50HZ
Dimensions (H×W×D):	A40C 368×352×210(mm) A20C 280×350×240(mm)
System Hum and Noise:	≥70dB
Input impedance:	> 1MΩ
Speaker impedance:	8ohms (10" + horn/8" + horn)

CHARGE LED SHOW: when battery is ok show blue colour, when battery low show purple colour, when the machine is protect the colour is red, when charge on the purple shine, when charge ok the purple long bright.

1. 話筒輸入(MIC)
2. 話筒音量調節(MIC VOL)
3. 樂器輸入1(LINE1)
4. 樂器1音量調節(1VOL)
5. 話筒及樂器1混響(MIC & 1 REV)
6. 樂器輸入2(LINE2)
7. 樂器2音量調節(2VOL)
8. 樂器2低音調節(2BASS)
9. 樂器2高音調節(2TRE)
10. 樂器2混響(2REV)
11. 音樂輸入(AUX)
12. 總音量控制(MASTER)
13. 電源插孔(DC CHARGER)
14. 電量和充電指示燈
15. 耳機監聽(PHONE)
16. 綫性輸出(DI OUT)
17. 模式轉換(MODE)
18. 下一曲按鈕(NEXT)
19. 播放按鈕(PLAY)
20. 上一曲按鈕(BACK)

## 主要技術指標:

輸出功率:	80W/40W
電源:	AC220V50HZ/AC110V60HZ
外型尺寸(H×W×D):	A40C 368×352×210(mm) A20C 280×350×240(mm)
信噪比:	≥70dB
輸入阻抗:	> 1MΩ
揚聲器阻抗:	8ohms (10" + horn/8" + horn)

充電LED顯示: 電量足: 藍色; 電量低: 紫色; 紅色機器保護充電狀態時紫色閃動, 充電飽和紫色長亮

## 按鍵操作指南:

按鍵 KEY	操作方式 OPERATE	USB/SD状态 (MODE)		Bluetooth状态 (MODE)	
MODE	短按 Press	USB/SD/BT转换 (CHANGE)		USB/SD/BT转换(CHANGE)	
	长按 Hold on	录音	Recording	录音	Recording
PLAY/PAUSE	短按 Press	播放/暂停	Play/Pause	播放/暂停	Play/Pause
	长按 Hold on	录音播放/音乐播放	Play Rec/Play Music	播放/暂停	Play/Pause
BACK	短按 Press	上一曲	Back	上一曲	Back
	长按 Hold on	音量减	Dic Volume	音量减	Dic Volume
NEXT	短按 Press	下一曲	Next	下一曲	Next
	长按 Hold on	音量加	Inc Volume	音量加	Inc Volume