


STREET POWER 街霸

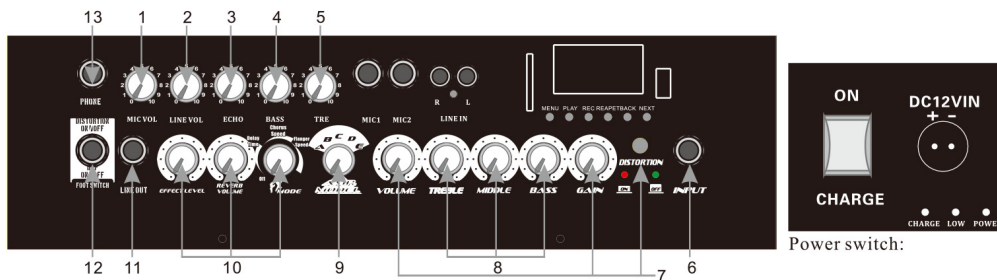

1、Power switch:

- a、Using DC12V rechargeable battery:
Put the switch to on position, then the green power LED will light showing this machine is power on. When using, if the battery's voltage is too low, the red low LED will light, showing that the battery need recharge or need use the AC power (If this time the power cord is in the socket, the charge LED will show red or green depends on whether it is being charged or not. This time the battery is still operation, so when the switch is at on position please avoid using AC power)
- b、Using external DC power supply:
Connect the positive and negative charges as the machine rear panel show.
- c、Charging or using AC power:
Insert the power cord to the electric socket, put the switch on the charge position, the green power LED will light. When in the course of charge the charge LED will show red, when the charging is finished, the charge LED will show green, in this time the machine can work depending on the AC power.

2、Function:

- a、MIC:
Using wireless MIC(If attached):
Install 9V battery to the wireless MIC, then put the switch on the wireless MIC to the on position.
Using wire MIC:
Insert it to M1, M2 socket, using knob 1 to adjust the volume, using knob 4 to adjust the bass, using knob 5 to adjust the treble.
- b、blueteech/USB/SD CARD PLAYER:
MENU:blueteech/music mode change. PLAY:play/

- c、CD IN:
For connecting of CD, insert to the Line in socket, using knob 2 to adjust the volume, using knob 4 to adjust the bass, using knob 5 to adjust the treble.
 - d、Guitars:
6 for insert guitar, 7 for set a proper volume, 8 for set a proper tone, 9 for select suitable amplifier, 10 for select a request effects, 11 for guitar sound line out, 12 for footswitch to select channel and effect on/off, 13 for guitar sound through phone out.
- ## 3、Safety instructions:
- When battery need charge should immediately charge, if you still use in this station will cause damage to the battery. When have a long time don't use this machine, you need charge the machine every two months, every time need 10-14 hours.

TECHNICAL SPECIFICATION

Power output:	120W
Power Supply:	AC220V 50HZ/AC110V 60HZ
Storage battery	12V7AH
Dimensions(H×W×D):	360 x 480 x 260(mm)
System Hum and Noise:	≥70dB
Input impedance:	>1MΩ
Speakers impedance:	2x8" + 2x3"

一、确定电源:

- a、使用内置DC12V充电电池时:
将开关拨向ON位置, 面板绿色电源指示POWER灯亮, 此时本机处于正常工作状态。如果在使用过程中发现低压, 红色欠压指示LOW灯亮, 表示电池电压不足需要及时充电或接交流电工作。(此时如将电源线插头插入交流插座, 充电CHARGE灯根据是否在充电显示红色或绿色, 这时使用的还是充电电池, 故请避免在此状态下接交流电源)
 - b、使用外部蓄電池供电时:
按正负极标志接好蓄電池即可使用。
 - c、充电或使用交流电源时:
将电源线插头插入交流插座, 将开关拨向CHARGE位置, 面板绿色电源指示POWER灯亮, 充电时充电CHARGE灯显示红色, 充满电后显示绿色, 此时机器借助交流电源都可工作。
 - d、关机:
将电源开关置于中间位置
- ## 二、功能操作:
- a、话筒扩音:
将无线手持话筒及无线咪发射器(如包括)装上9V电池, 再将发射器开关拨至ON及发射器音量旋钮至适当位置, 将无线手持话筒两个开关分别拨至PWR及ON位置, 如果使用有线话筒, 将插头插入M1, M2话筒插座, 使用旋钮1调节音量, 旋钮3调节混响, 旋钮4调节低音, 旋钮5调节高音。
 - b、蓝牙/USB/SD卡播放录音系统:
屏幕下方六个按钮从左到右分别为: MENU:蓝牙/音乐模式转换。PLAY:播放/暂停音乐。REC:按一下录音, 再按一下停止录音。REPEAT:循环播放, 长按进入或退出录音文件夹。BACK:选择上一曲, 长按减音量。NEXT:选择下一曲, 长按增音量。使用旋钮2调节音量, 旋钮4调节低音, 旋钮5调节高音。

c、外接音频:

- 将外接音频(如CD,VCD,MP3等)音乐信号从LINE In端口输入, 使用旋钮2调节音量, 旋钮4调节低音, 旋钮5调节高音。
- ## d、吉他输入:
- 吉他插入插孔6, 开关DISTORTION, 增益GAIN及音量VOLUME(7)配合得到合适的音量, 均衡器8配合得到合适的音色, 9是音箱模拟器, 10是效果器选择钮, (1)是吉他信号线性输出, (2)是吉他通道脚踏开关可以控制通道和效果开关, (3)是吉他通道耳机输出。
- ## 三、注意事项:
- a、防止高温, 勿将本机置于烈日下暴晒或靠近热器材的位置。
 - b、请勿将本机放置于湿度很高或多尘的地方。
 - c、请勿将本机放置于不通风处。
 - d、电池低压时, 一定要充电, 过放电电池会造成永久性损坏。长时间不使用时, 请每两个月补充电一次, 每一次充电时间10-14小时。

主要技术指标:

输出功率:	120W
电源:	AC220V/50HZ/ AC110V 60HZ
外型尺寸(H×W×D):	360X480X260(mm)
信噪比:	≥70dB
输入阻抗:	>1MΩ
扬声器阻抗:	2X8" + 2X3"